



2-Wire Video Outdoor Station

User Manual

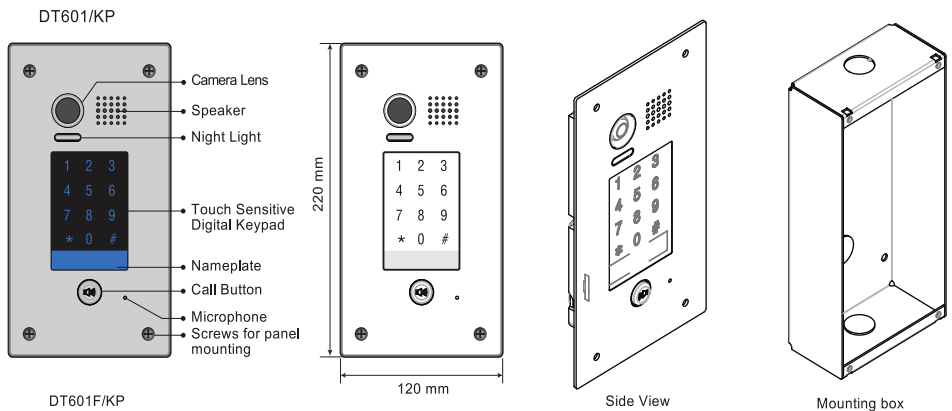

PARTS OVERVIEW

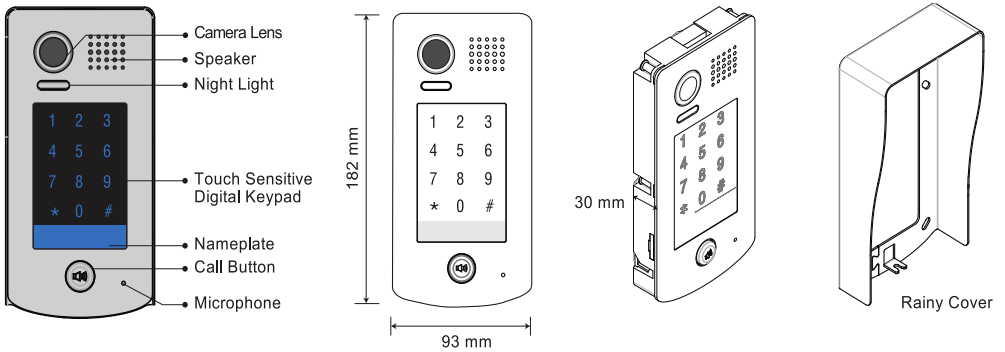

UNLOCK PIN

- Enter your pin into the keypad, and press the # button.
- If the pin is valid, the door attached to the device should open.
- If you make a mistake, press * to clear.
- If you enter an invalid code 10 times, the keypad will be disabled for 60 seconds.

PROGRAMMING USER CODES

Your Master Code is: _____

Change the Master Code

1. Enter programming <master code> + #
2. Enter command for setting the master code 01 + #
3. Enter New Master Code, example given is **9876**. 9876 + #
4. Enter New Master Code Again. 9876 + #
5. Exit Programming ***

Change User Codes

User Code Locations are set from **20** to **59**.

This means the FIRST user code is at location **20**,
the SECOND user code is at location **21**, and so on (through to **59**)

It is recommended you record which user code was entered in which location,
so you can overwrite or reference the codes later.

Keeping a simple table like this helps.

No.	Location No.	Name	PIN
1	20	John	2425
2	21	David	5544
3	22	Peter	4211
4	23	Stuart	2592
5	24	Henry	2355

Up to location 59. (40 user codes in total)

1. Enter programming <master code> + #
2. Enter user code location (20 to 59). 20 + #
3. Enter the New Code. Example given is 2425. 2425 + #
4. Exit Programming ***

The design and specifications can be modified without notice to the user. Right to interpret and copyright of this manual are reserved.
