

How to Reset DVR & NVR (Factory Default & Password)

In order to reset, the reset software must be downloaded and copied into the USB memory stick. Create a new folder in the USB memory stick and name it “upgrade”. Copy the reset software (the list is below) into the “upgrade” folder.

.config_clear.bin

NOTICE: The folder on the USB memory stick must be named “**upgrade**”.

1. Please power off DVR first.
2. Insert USB memory stick including reset software into the USB port on the front cover, and then power on DVR.
3. DVR or NVR setting will be the factory default status itself as the image of the below.



4. When the factory default is finished as the below image, remove USB memory stick from the USB port on the front cover.



5. The password on the factory default status is “1111”.

- End -