



Step 1:

- Extract the zip file to get the installer.exe file that will look like this.

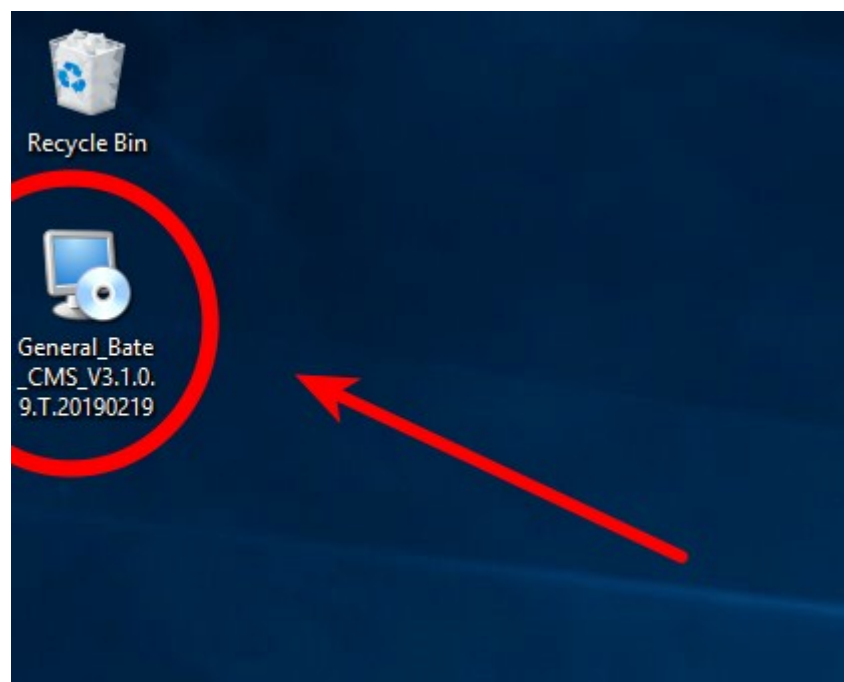


Step 2:

- Simply follow the step by step install process till Finish.

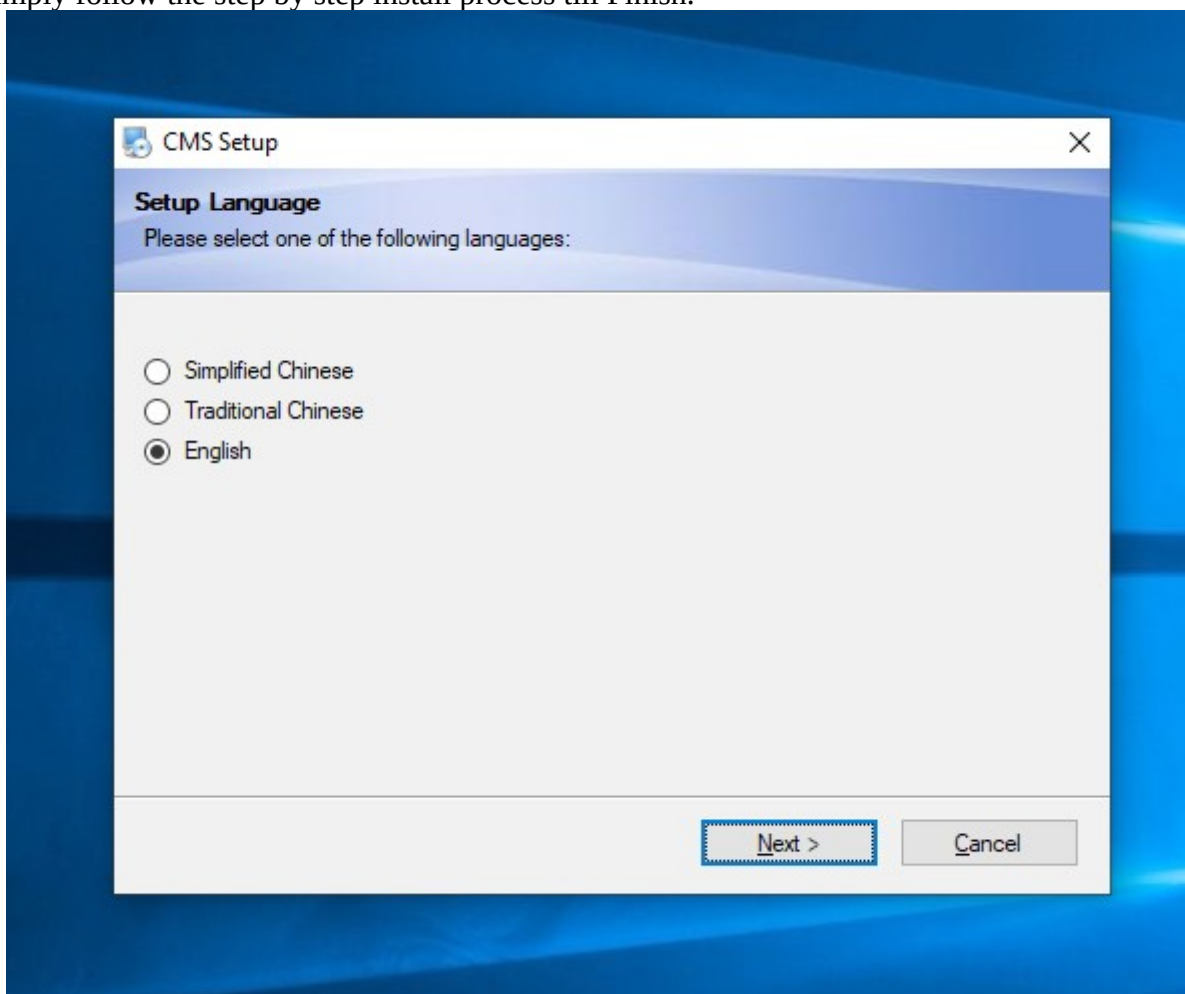


Step 3:

- After launching the app for the first time you will be asked for language setup.

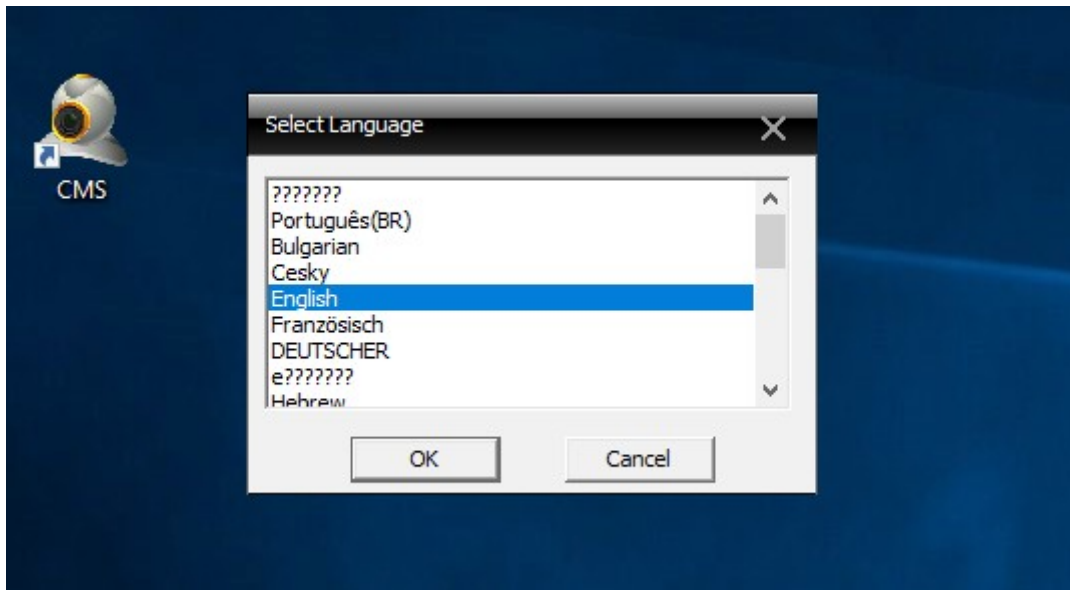

Step 4:


- On this page simply tick the boxes to Save Password and Auto Login. No need to enter any password.

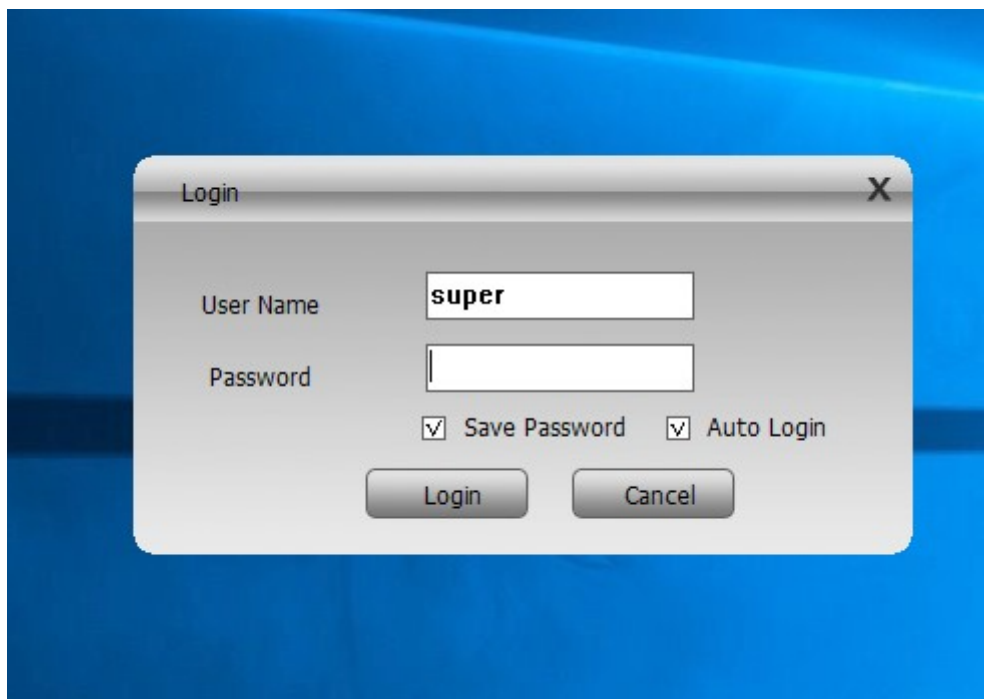

Step 5:


- When the interface opens:

1. Click on “System” on the bottom right of the screen.
2. Click on “Device Manager” on the top right hadnside of the screen.
3. Click on “Add Area”

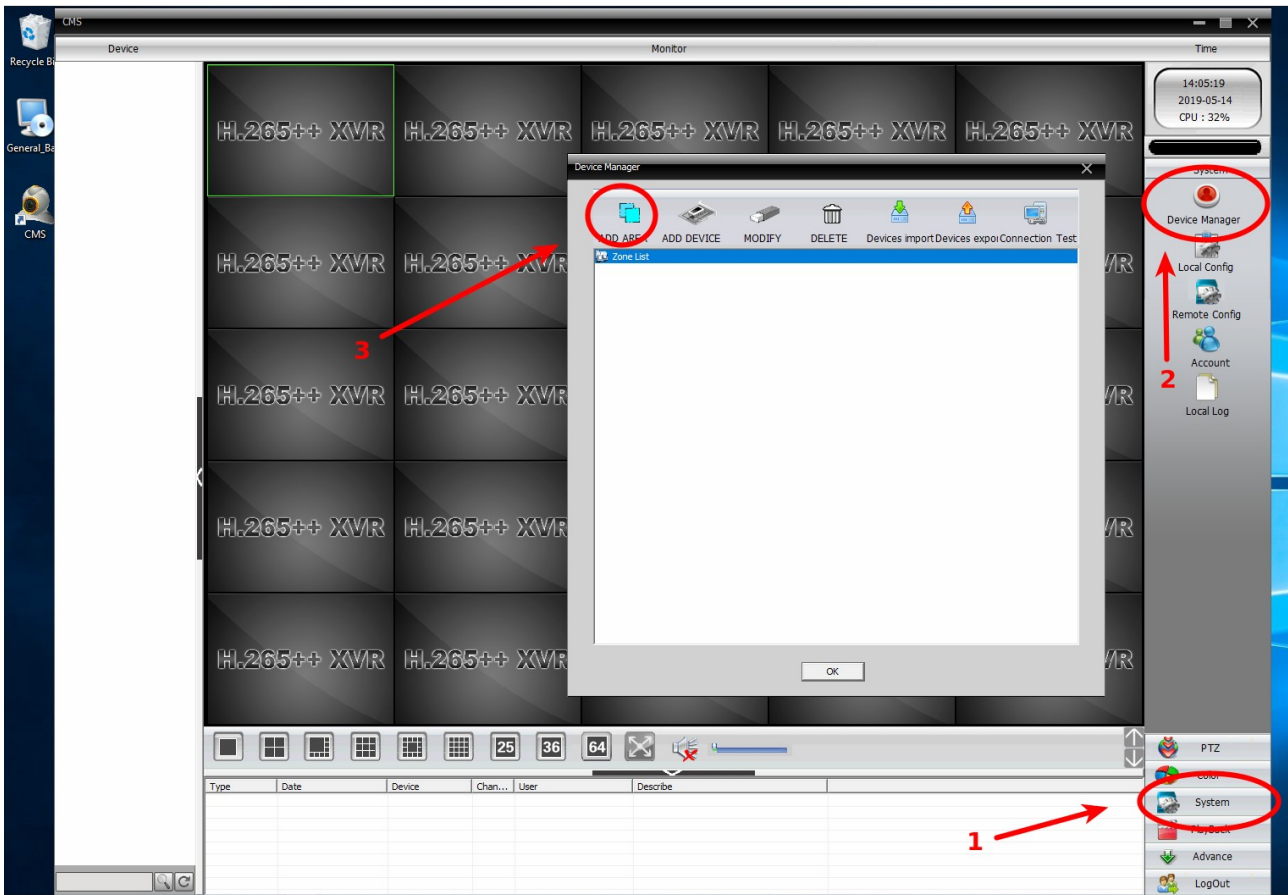

Step 6:


- Type in any Zone Name you prefer, in this example I'll just name it "Office".

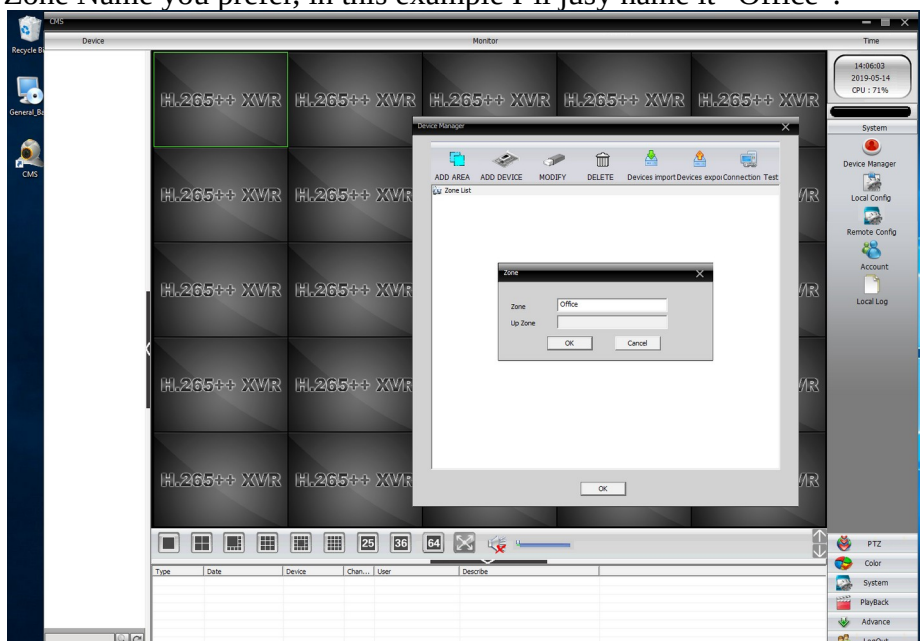

Step 7:


- After adding the Zone:

1. Tap on the "Zone" you created.
2. Click on "ADD DEVICE"
3. Then Click on "IP Search".

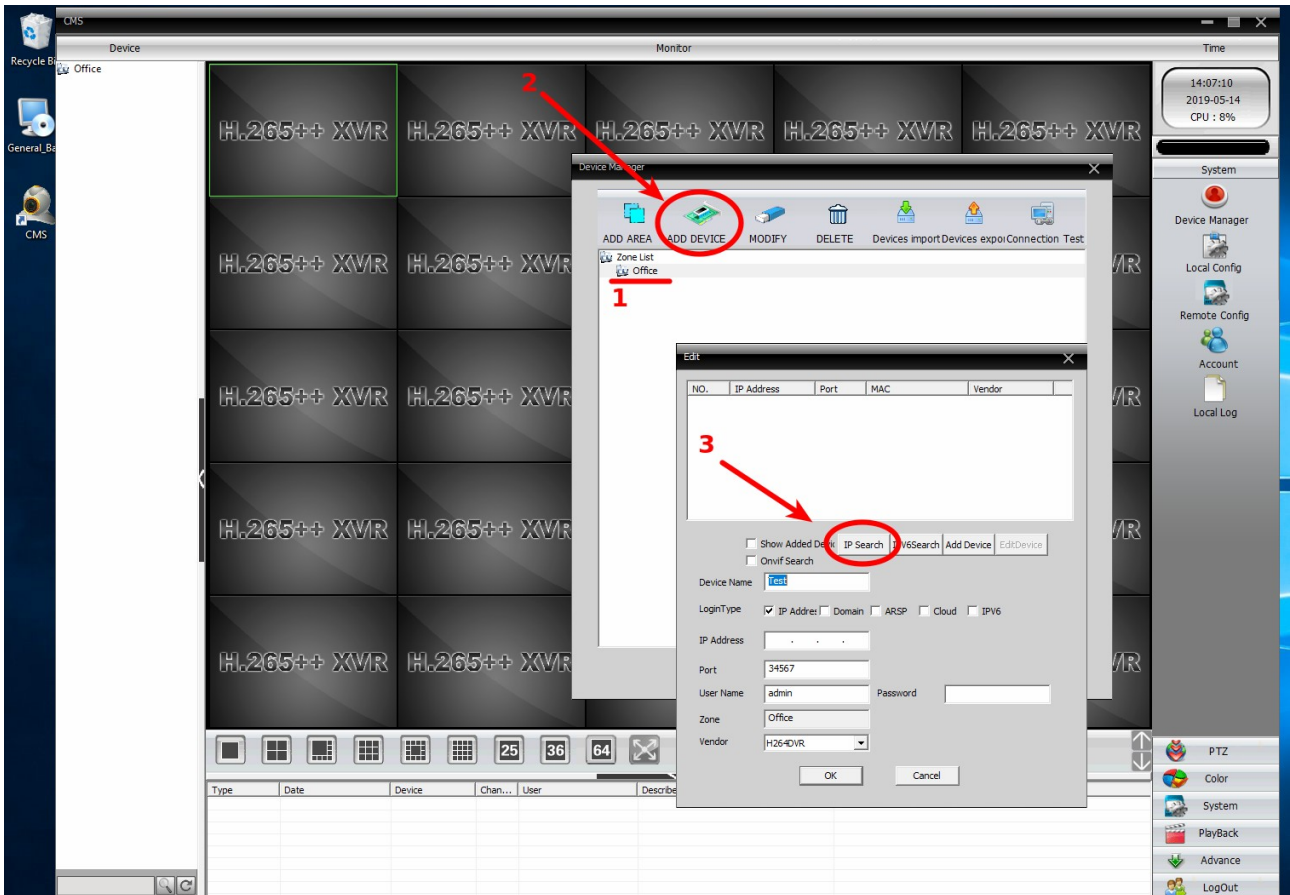


Step 8:

- You will be shown a list of Devices with there IP Addresses, one of which will be the CCTV Recorder.
- Among the list you would be looking for a MAC that I have previously specified.
- Once you click on it the IP address and the rest of the details will auto populate.
- Feel Free to rename the “Device Name” - I will keep mine as the IP Address.
- Click OK.

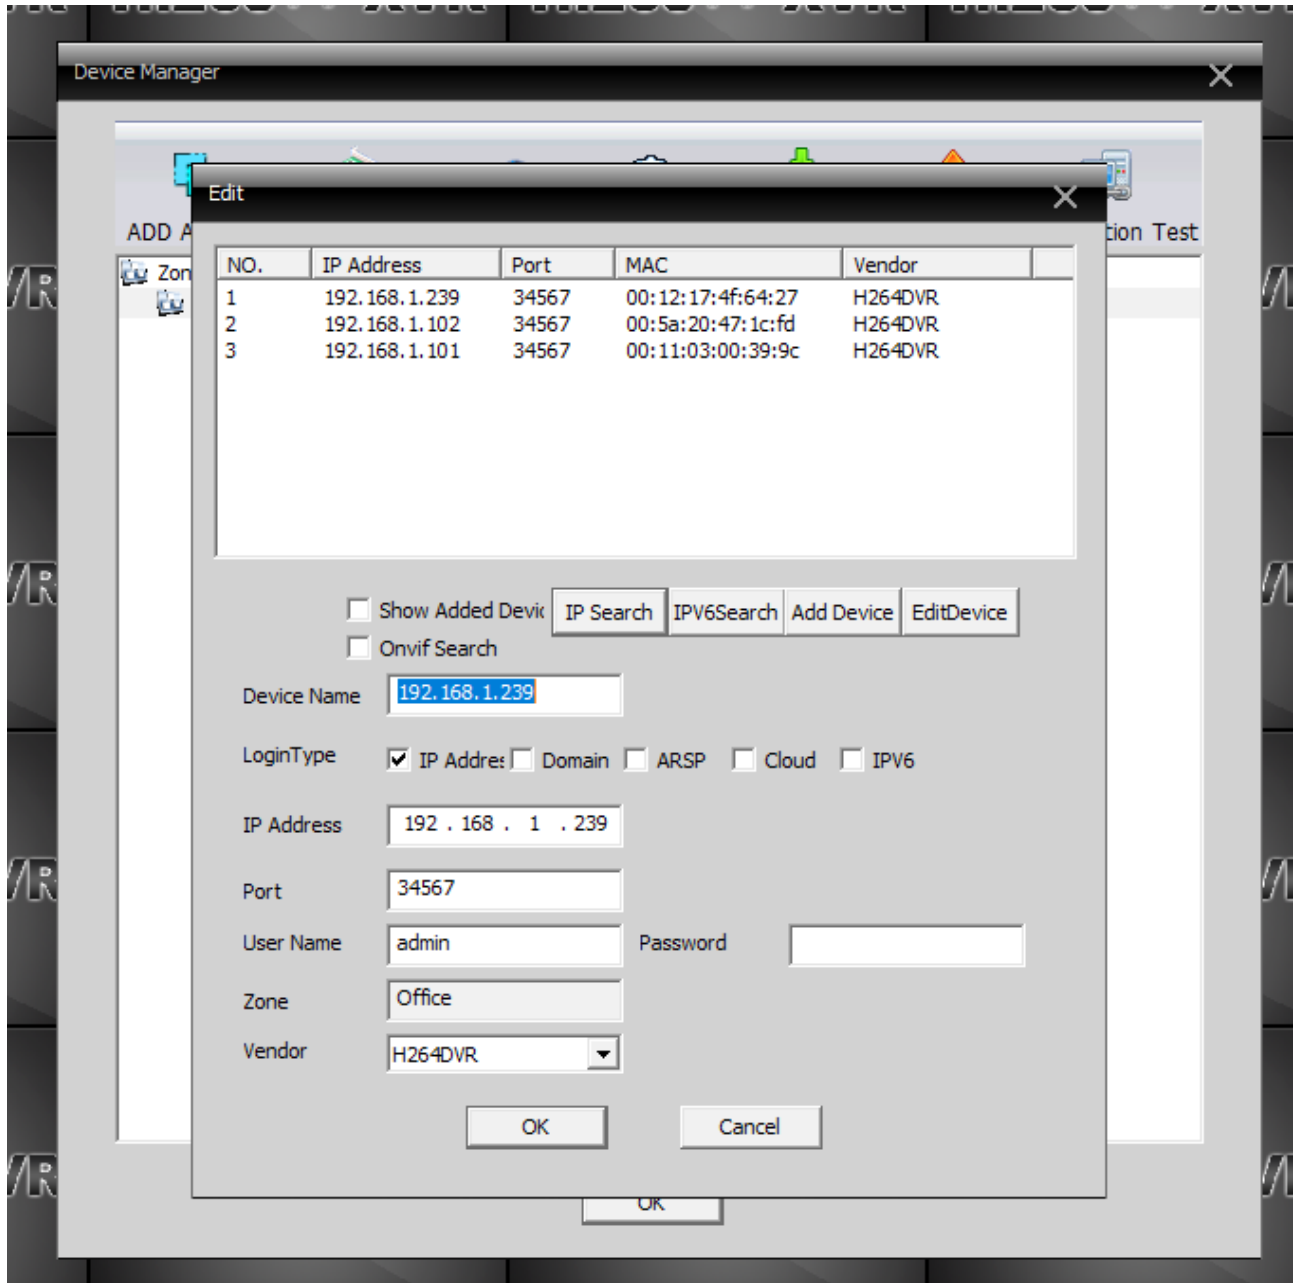

Step 09:

- on the top left corner of the interface you will see that My Device is already added.
- All you have to do is right click on it and choose the first option to Conect ALL cameras.

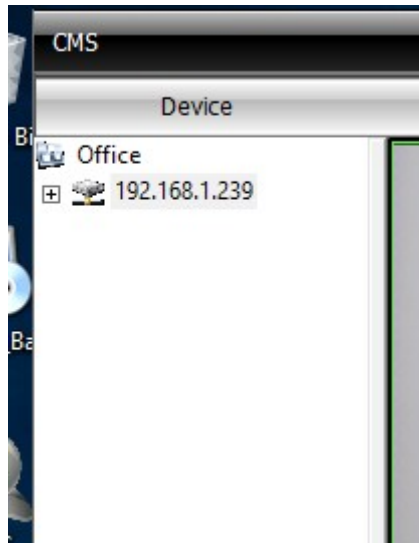

After this process your cameras will display like so.

NOTE: On my machine I only hooked up one camera to make this tutorial.

